



NEOTAP MULTI (R)

HOT, COLD, SPARKLING + MIXER

INSTALLATION AND OPERATION GUIDE




CONTENTS

Preface - Underbench Parts	1
Multitap - Extended Diagram	2
Multitap - Installation Guide	3
Multitap - Pipework Instructions/Diagram	4
Push Lock Fitting/Plumbers Delight Guide	7
Co2 Bottle Install/Refill	8
Hot water operation - Underbench	9
Mixer/Faucet Operation	10
Warranty Info and Maintenance	13
FAQ, Leakage Detection Device and Swivel Tap - Warning	15
Data Sheet	


Please read these instructions completely before operating this unit

PREFACE - UNDERBENCH PARTS


Before using this machine, we advise you to read this manual thoroughly. Please follow the instructions to ensure proper operation and the lasting of the machine

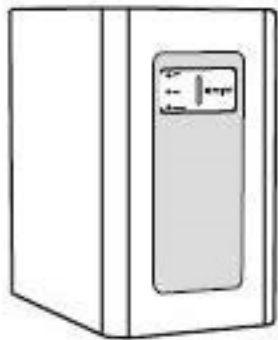


Neotap - Underbench
Boiling, Chilled, Ambient

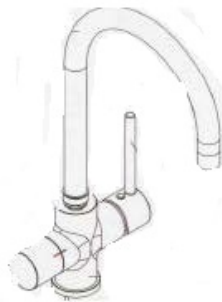

Faucet

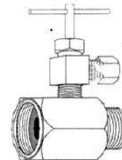

Brass Tee Off Valve
(Plumbers Delight)



Pressure Reducing Valve
(PRV)



KDF30 Filter



1/4" Pipe
1.5m Co2 Supply
2m Water Supply



One way tee valve
(Grey and White
pipe connected)



Power Cord



Co2 Bottle



Regulator




Regulator Adapter
(2.2L Gas Bottle)




Brass reducer x2
(For Flexihoses)

MULTITAP - EXPANDED DIAGRAM

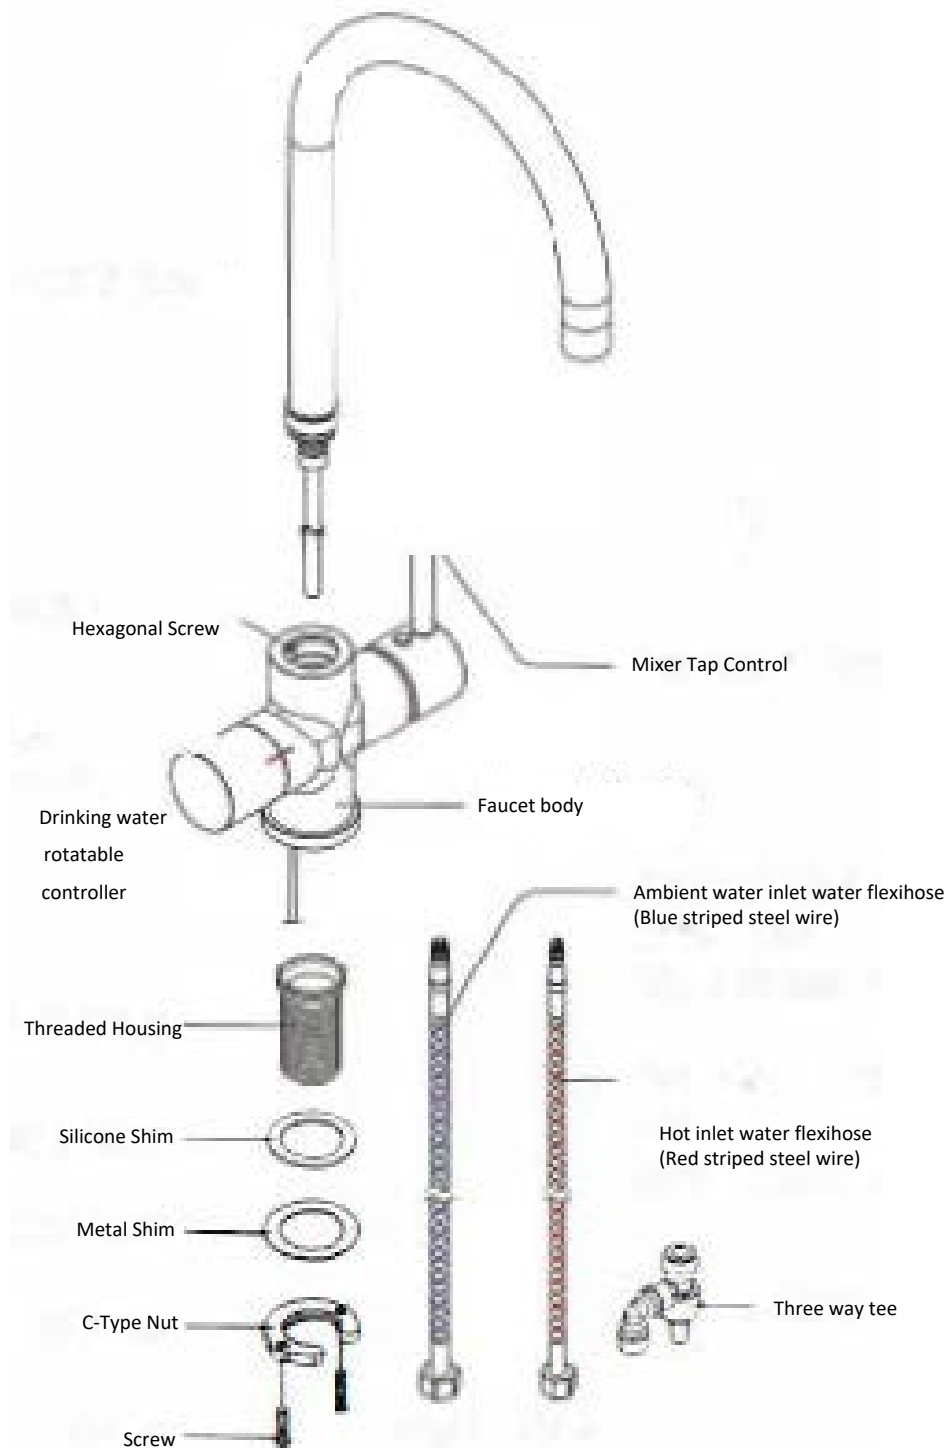

Please check the parts are all correct in the box, and read the manual thoroughly. To install and use the faucet by following instruction to avoid damage

PIPING INSTALLATION

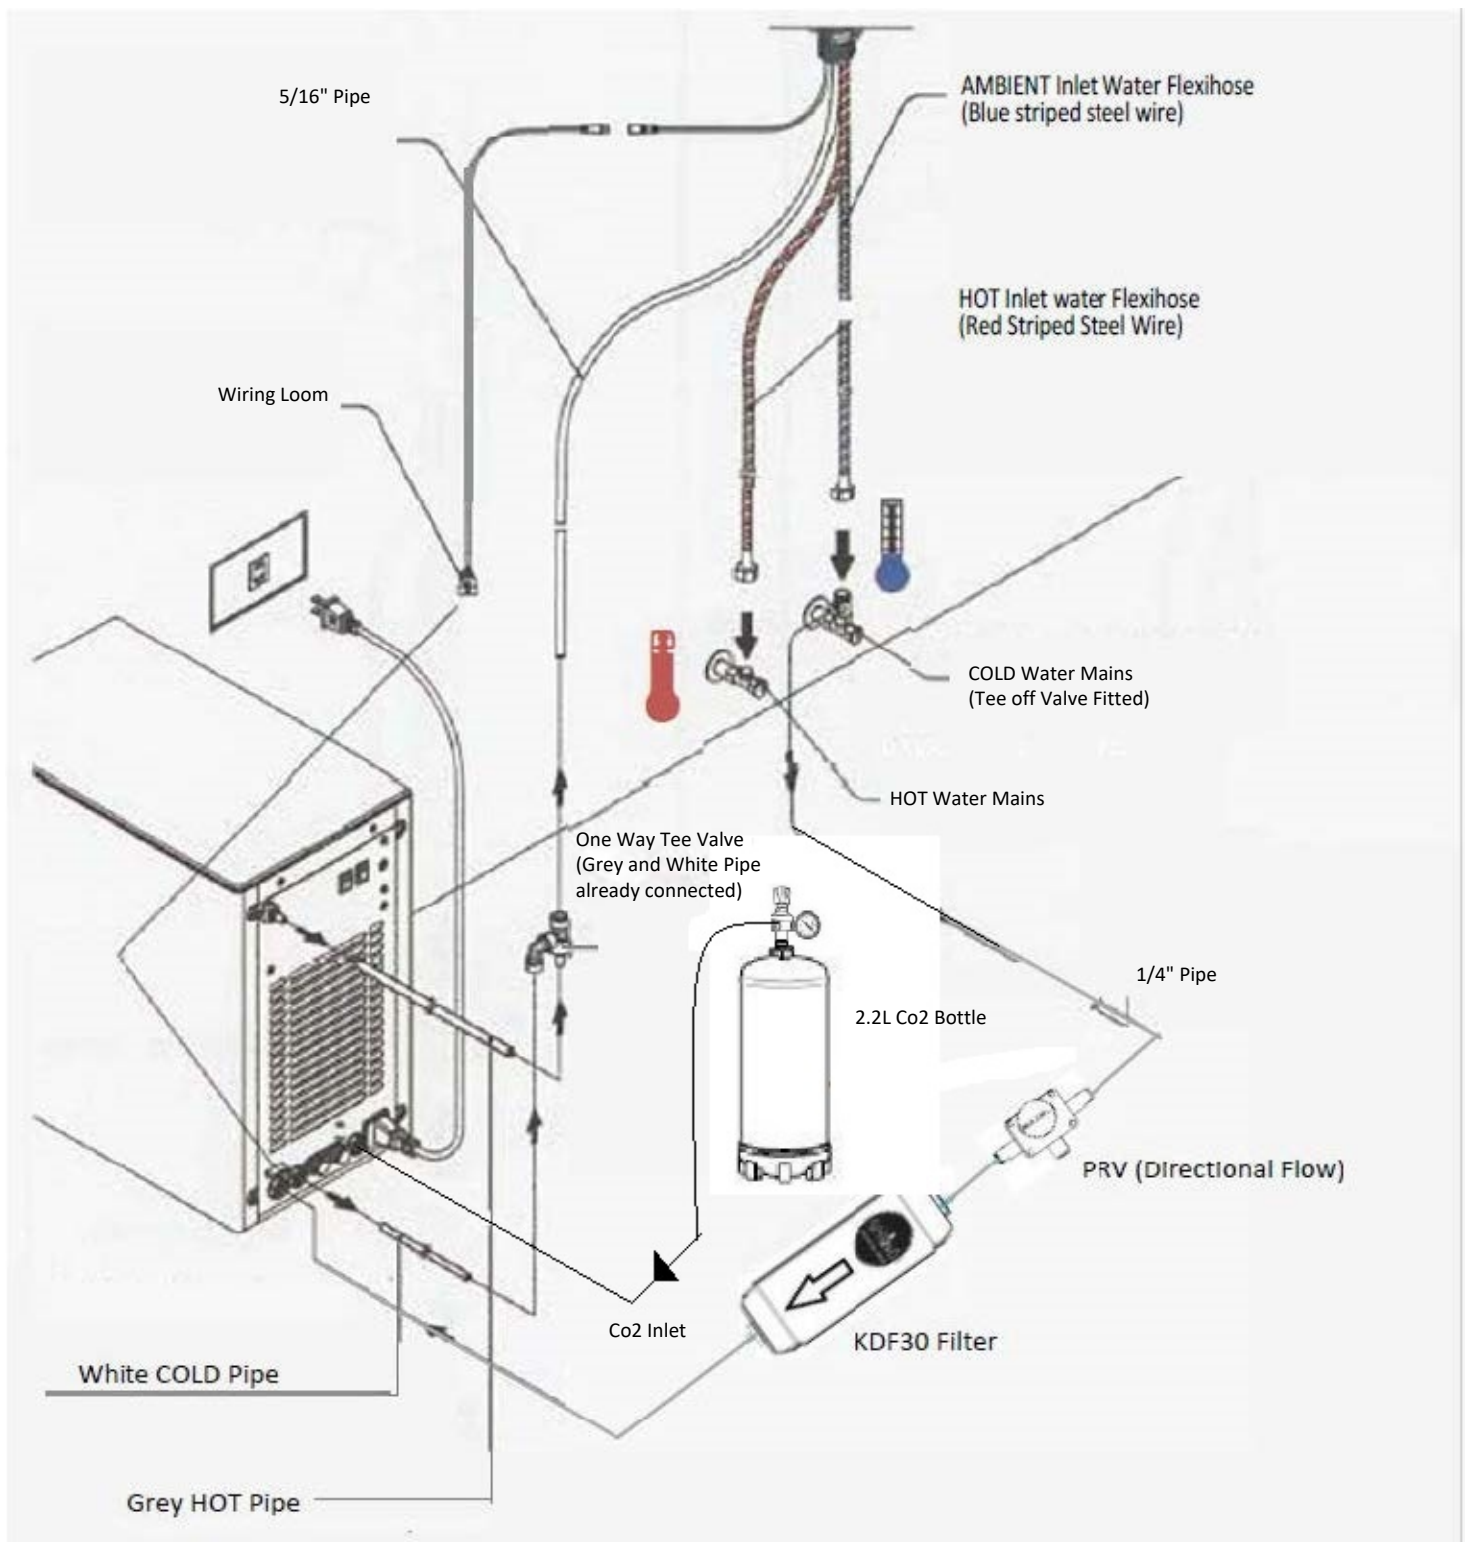

PIPING INSTALLATION

We recommend the instructions specified in this guide be followed in sequence by a qualified tradesperson for successful installation.

This Neotap has a 24 month back to base warranty from purchase, but this may be voided if unsatisfactory installation results in damage to the unit.

1. Select the appropriate position for the tap to ensure it dispenses into the sink, allowing ample clearance below the outlet and at least 50mm from the wall. Drill a 35mm hole
2. Isolate the water supply. Disassemble the original COLD water Tap/Flexihose connections. Reconnect the plumbers delight inline
3. Using the 1/4" Pipe provided connect the 1/4" inlet ball valve to the Pressure Reducing Valve. The PRV is then connected to the KDF30 Filter and finally into the water inlet. Please ensure the filter has been flushed before connecting. The PRV and Filter have a directional water flow, connect as marked on the part
4. Connect the 5/16" Pipe from the Faucet to the top of the one way tee valve (Grey HOT tube, and White COLD tube already attached)
5. Feed the faucet (Including pre-attached pipes) through the pre-drilled hole. Position so the tap sits flush with the bench-top
6. Following the MultiTap Install guide Pg.3 Screw and tighten the tap nut to ensure the tap is correctly positioned on top. Be careful not to over-tighten as this may split the nut
NOTE: Once placed do not swivel the tap - Internal tubes and cables within the faucet cannot handle rotation more than 180deg and risk being damaged
7. Find the best place for the NEOTAP unit under the bench, allowing 150mm clearance around the top and rear of the unit for ventilation. Allow room for the filter and piping as specified above
8. From the One Way Tee Valve - Connect the GREY pipe to the HOT water outlet at the top of the unit (Pressure Fit) and the White 1/4" Pipe to the COLD water outlet at the bottom (Push Lock)
NOTE: Ideally the GREY pipe should flow in a straight line upward. This pipe can be shortened and should be as short as possible
9. Connect the RED Flexihose to the HOT Mains Water Outlet, and BLUE Flexihose to the COLD Mains Water Outlet for the mixer side of the tap
10. Carefully attach the wiring loom to the NEOTAP unit
11. Connect the machine to the power supply using the cord at the rear of the unit. Leave power and water supply OFF
12. Ensure all fittings, electrical connections and piping are secure to and from the unit
13. Turn on the water and power supply at the wall

PIPING INSTALLATION

Co2 Bottle Installation : Please skip to step 16 if you have a Non-Sparkling model

12. Place the Co2 bottle upright in the undersink cavity as close to the NEOTAP unit as possible

DISPOSABLE GAS BOTTLE AND REGULATOR - INSTRUCTIONS

1. To connect disposable gas bottle, first thread the adapter onto the gas bottle making sure the dial at the top is closed (Completely anti clockwise)
2. Attach the regulator to the adapter making sure the the regulator is also in the OFF position (Completely anti-clockwise)
3. Open the gas bottle by turning the dial at the top of the adapter clockwise

[Continue to Step 15](#)

REUSABLE GAS BOTTLE AND REGULATOR - INSTRUCTIONS

12. Turn the knob fully anti-clockwise to ensure the regulator is in the OFF position
13. Connect the Co2 bottle to the regulator by screwing the regulator onto the bottle firmly (Clockwise). Be careful not to overtighten to avoid damaging the nut
14. Open gas bottle by turning the main bottle valve anticlockwise
15. Attach the regulator to the Co2 connector at the rear of the unit using the 1/4" pipe provided. DO NOT OPEN REGULATOR - This is addressed in Co2 Operation
16. Ensure the whole unit and its components have at least 150mm ventilation surrounding
17. Check there are no kinks or "sag" in the tubing from the unit to the faucet. This will ensure that any reduction in water flow is reduced
18. Ensure all fittings, electrical connections and piping are secure to and from the unit
19. Turn on the Water and Power supply


Co2 BOTTLE - INSTALLATION

1. Ensure the Co2 bottle is connected firmly to the regulator and the Co2 tube is fitted correctly.
2. Slowly turn the dial on the regulator clockwise until the gauge reads 3BAR


(Note: If you want to reduce the pressure you must first turn the dial anticlockwise and then vent to relieve existing pressure. The gauge will then settle and read accurately)

3. Turn off the water at the valve and purge any air from the sparkling line by pressing the sparkling button on the tap for 30 seconds.
4. Turn the water back on at the valve and the SODA switch at the rear of the unit.
5. Press the sparkling button on the tap for 15 seconds to allow any excess Co2 to be dispensed
6. Operate the sparkling button on the tap 2-3 times for 15seconds each time (1minute cooldown) until you notice the water is sparkling. Pressure will fluctuate between 3-4 bar

All Co2 bottles should be upright during use, storage and transit. If the bottle has been left horizontal, place upright and stand for 60+ minutes before use to allow contents to settle

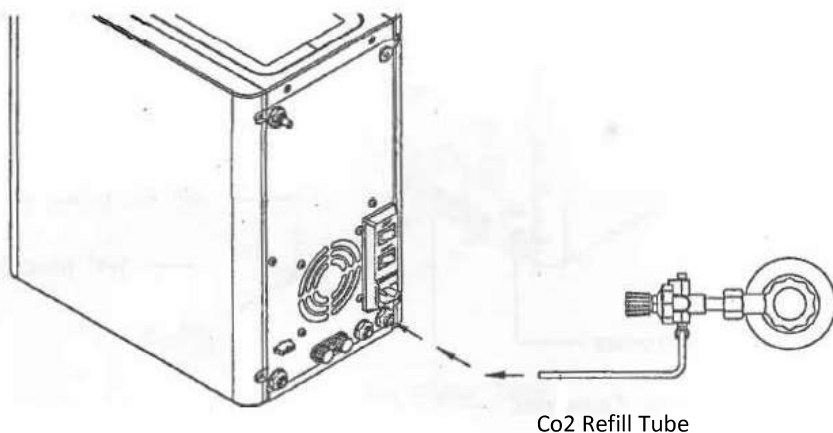

TOP VIEW - Co2 Bottle

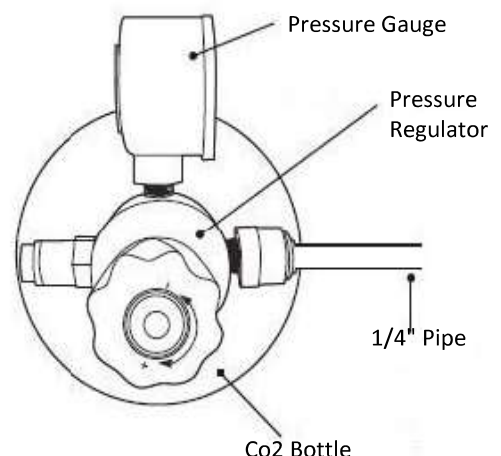

PLUMBERS DELIGHT - INSTALLATION


Disassemble the existing flexihose from the Cold Water Feed

Connect the water feed to the female thread of the Plumbers delight

Remove 1/4" tube nut from the top of the Plumbers Delight. Slide the nut over the 1/4" tube.

Push the 1/4" tube over the spigot and secure the nut


Connect the flexihose to the large male plumbers delight connection to feed the mixer tap

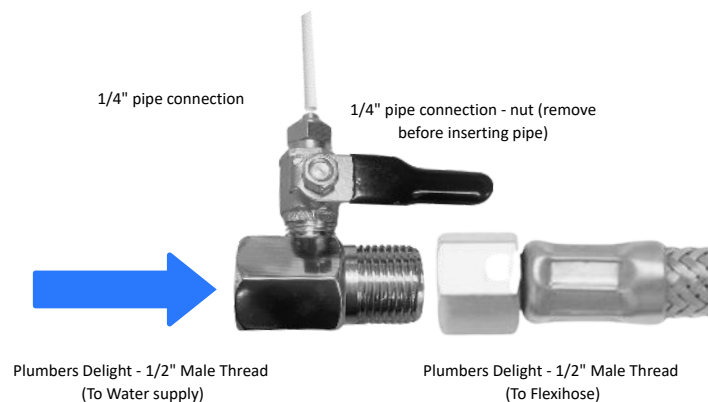


PUSH LOCK FITTING - INSTRUCTIONS




1. Cut the 1/4" Pipe square and push into the fitting.



2. The Push lock fitting will grip before it seals. Ensure the pipe is pushed past the O-Ring into the fitting completely





3. Pipe is secured in position. A small tug back will guarantee the pipe is in place

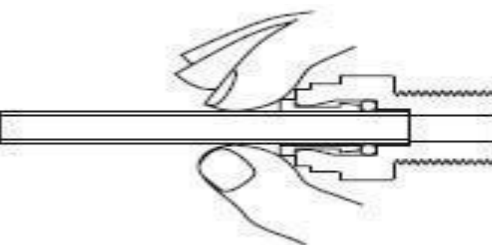

Disconnection

Pull locking ring flush against the fitting and hold. The pipe can now be released by pulling on it.

HOT WATER OPERATION - UNDERBENCH

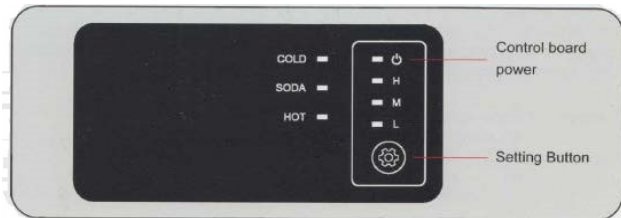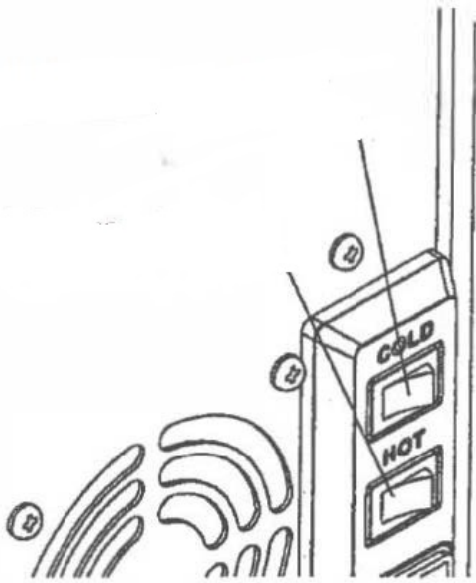


1. Press the HOT button on the Faucet. Make sure the water is flowing before turning on the HOT power switch at the rear of the unit (This will ensure the HOT tank in the unit is full before turning on the element to prevent it burning out)
2. As soon as the HOT switch is on the HEATING LED light will illuminate. The LED will turn off once the heating process is complete
3. Hot water temperature can be adjusted using the settings button on the face of the unit. Press and hold the settings button for 3 seconds LED will flash. Press again and the Red light will cycle through LOW, MEDIUM and HIGH

MULTITAP - MIXER INSTRUCTIONS


1. There are two marks on the faucet knob for cold and hot water. Blue color is ambient water and red color is hot water.



2. Hold faucet knob and rotate, follow the arrow direction to choose hot or ambient water.

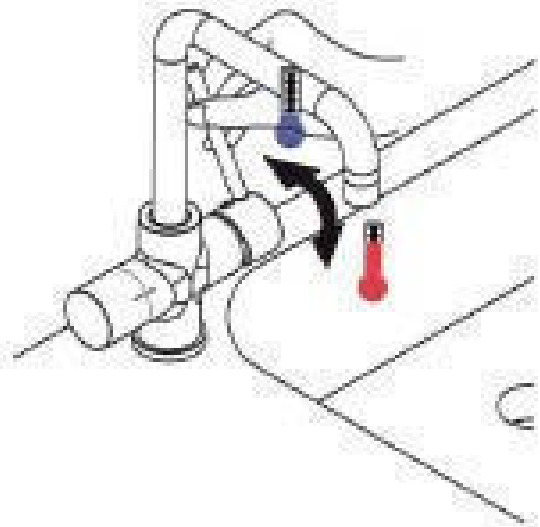


3. Pull the knob to right as arrow direction, the water will be dispensed.

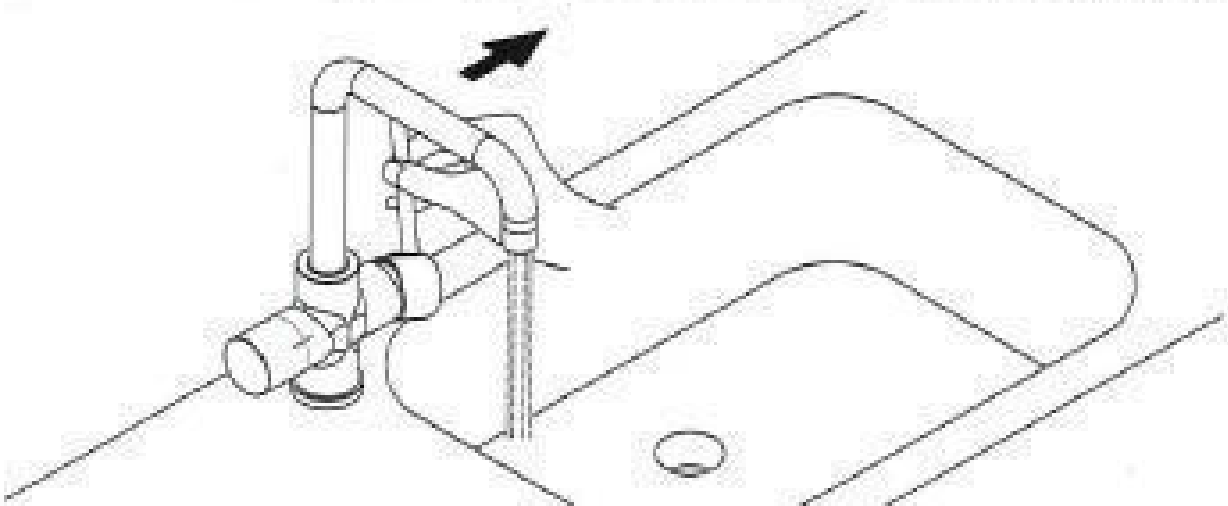


MULTITAP - FAUCET INSTRUCTIONS




There are 3 functions on the rotation controller and icon for turning off water supply

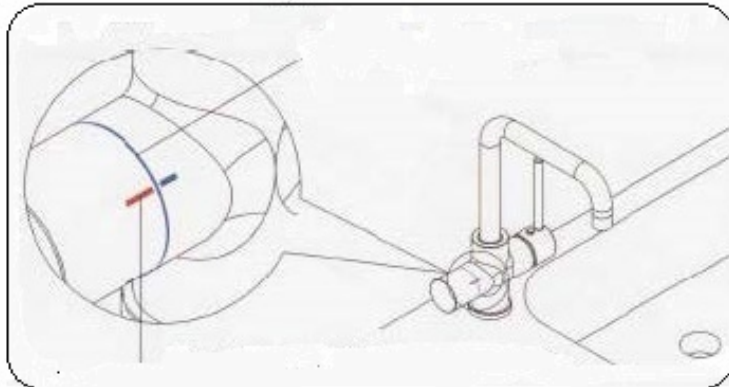

Align the stop dispensing icon on the rotation controller with the stop dispensing icon on the faucet body to stop dispensing water - The blue LED will be on

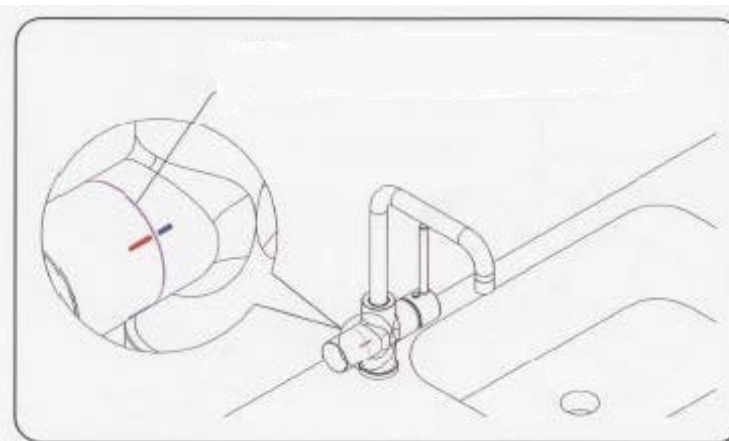


The LED light will be purple, when the water dispenser is heating HOT water

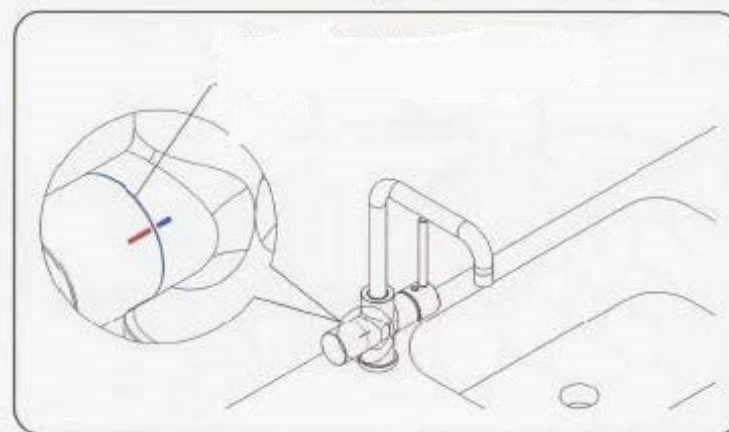


The LED light returns to blue colour when the heating process is done

MULTITAP - FAUCET INSTRUCTIONS

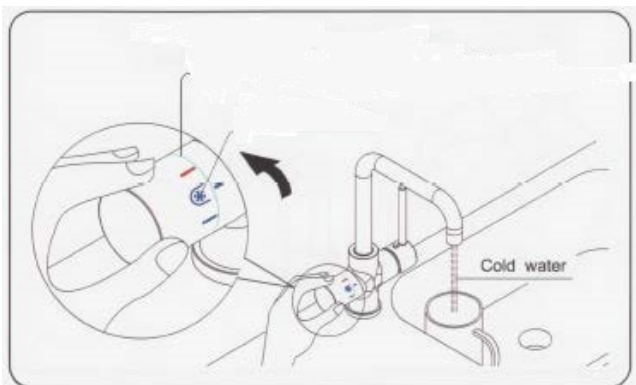


Dispensing COLD water, the Light Blue LED will be on

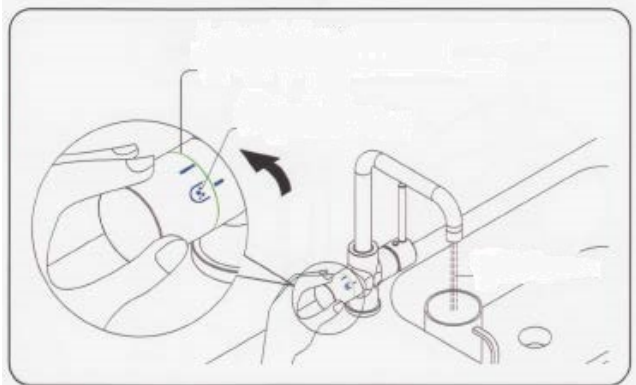

Dispensing SPARKLING water, the Green LED Will be on

MULTITAP - HOT WATER FAUCET INSTRUCTIONS

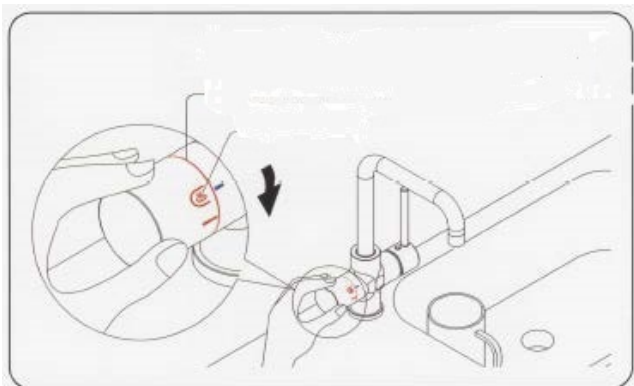


To dispense HOT Water first rotate the controller to HOT water icon to unlock - HOT Water will not be dispensed. Rotate back to the STOP Position Then rotate again within 3 seconds while the RED LED is blinking. The Red LED will then stop blinking and start to dispense HOT Water

For best results allow 5 seconds to pass before using, this allows the pipe to completely fill with HOT Water

If needing multiple cups please continuously hold or dispense within 5 seconds. After 5 seconds of no use, the HOT Tank will refill with Cold water. This will reduce the temperature until the water reheats

Please note the final temperature may vary dependant on the length of the tube, ambient air temperature and other factors

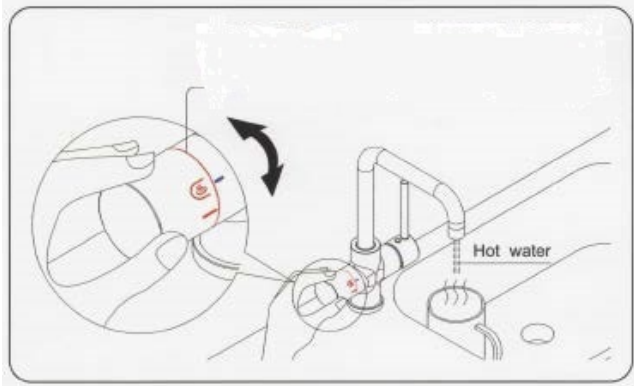

WARRANTY INFORMATION

Spring offers a 24 month back to base warranty on all units from the date of purchase
All installation and servicing should be completed by a qualified tradesperson
Faults with the product due to incorrect installation or operation may result in voided warranty

Details can be filled in via our warranty registration form at springnz.co.nz/warranty-registration-form/ or kept below for easy access

Product Information

Model	
Serial Number	
Date of Purchase	
Place of Purchase	
Invoice Number	
Date of Installation	
Installer Details	

MAINTENANCE GUIDELINES

For effective performance of the Neotap unit Spring Water Solutions recommend 6 monthly service checks and annual filter changes

Points to check on installation and subsequent maintenance

- Please ensure the unit is able to be easily accessed for service and changing of consumables
- Clean unit (Underbench and Faucet) to ensure it is kept in good condition and avoids damage
- Ensure the space is free from obstruction to avoid damage to the unit
- Check faucet connections are tight and functioning correctly to avoid leak
- Check gas pressure to ensure it is within recommended pressure level
- Check joints and fittings are secure to avoid leak
- Change the KDF/GAC50 Filter annually for best performance of Neotap Unit


*Spring Water Solutions offer installation, service and filter changes New Zealand wide
Please get in touch per the information below to book :)*

Trouble Shooting

Problem	Cause	Solution
Water isn't cold	Thermostat is off	Contact for service
	Refrigerant gas is low	Contact for service
	Problem with Compressor or Thermostat	Contact for service
No cold water from Tap		Please turn off the COLD power switch to allow ice block to melt. Will need to contact for service to adjust thermostat
	Ice blocking in system No water inside unit	Check mains supply
LED at end of faucet flashing	Leak detection activated	Leak detection activated as probe detected water. Contact for service
Change in water taste	Filter change	We recommend changing the filter every 1-2 years. Turn of water supply and replace filter per diagram 1
Low Flow	Filter Change	We recommend changing the filter every 1-2 years. Turn of water supply and replace filter per diagram 1
	Insufficient water supply	Refill unit
Sparkling not working	Soda Power off	Check switch is on
		Close the Co2 bottle and release the pressure from the pressure regulator. Press the soda tap to drain out the water and release the pressure inside the tank. Turn off the SODA switch when water has drained. Reopen the Co2 bottle and set the Co2 output to 3 bar. Turn on the Soda Power switch again to start producing Sparkling water
	Co2 output pressure is too high making the water dispenser short	
	Co2 has run out	Refill Co2 bottle
	Co2 Line needs recomissioning	Follow the Sparkling Install Instructions Pg3-4
	Water not sparkling enough after changing gas bottle	Co2 gas can take 24-48hrs to bind with the cold water after changing the gas bottle. You might be able to shorten this process by priming the Co2 tube per page 5
	Not enough bar pressure	Slightly increase Co2 bar pressure (Ideally between 3-4 bar)
Tap Leaking after Sparkling Water taken	Tap lines aerated	Sparkling water infuses gas into the water which can make the tap begin to drip. Pressing the Ambient or Chilled option for 2-3 seconds should flush the aerated water out and stop the leak

CAUTION: For your safety please contact us or a qualified technician for repair if you suspect the water dispenser is damaged

LEAKAGE DETECTION - DIAGRAM


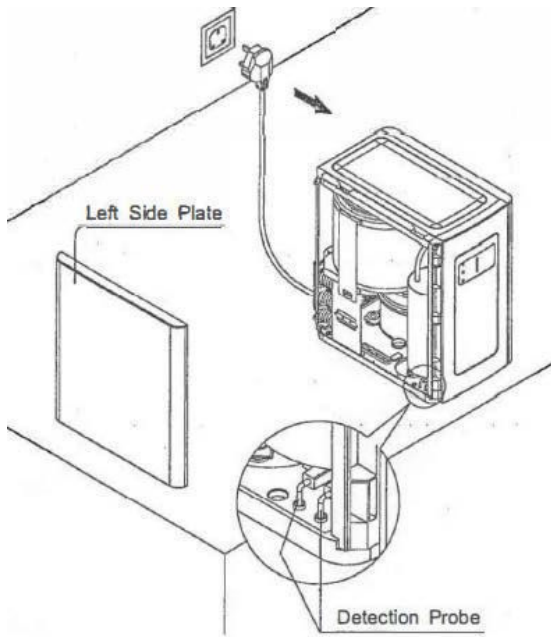


This device has a leakage detection probe fitted for safety purposes.

When the probe detects moisture you may notice the LED on the machine flashing accompanied by a beeping noise

We recommend turning off the electricity at the power supply and calling a qualified technician to carry out this work for your safety.

TAP SWIVEL - WARNING

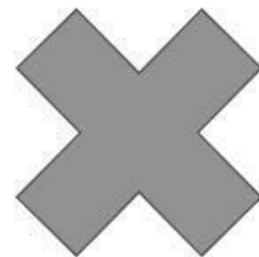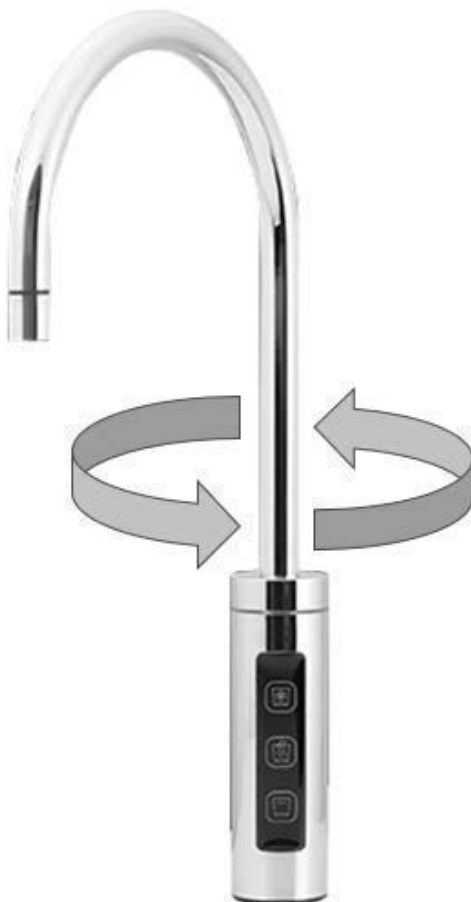

NO SWIVELLING TAP 360°

Internal tubes and cables within the faucet cannot handle completed rotation and will be damaged if turned more than 180 degrees.

Swivel feature is intended to find correct placement on the benchtop. Once placed, the tap should be left alone to avoid damage

PRODUCT DATA SHEET

Spring 5 Way Neotap

INSTANT TAP

Overview Underbench filter for boiling, chilled, sparkling and ambient drinking water with built-in mixer tap.



Model	Sparkling, Hot, Cold + Mixer
Filtration	Premium KDF/GAC 50, 5 Micron Filtration
Cold Temperature	4C to 10C
Chilling Capacity	20 Litres per hour
Heating Capacity	12 Litres per hour
Chilling Power Consumption	Direct Chill System 100W
Weight	18kg
Tap Finish	Chrome, Matte Black, Brushed Nickel
Water Connection	1/2 Inch
Power Requirements	Standard 10amp power outlet (Earth Leakage Protected)
Max. recommended inlet pressure	500 kPa
Required hole size for tap	35mm
Underbench Dimensions - Neotap	230mm W x 360mm D x 390mm H
Underbench Dimensions - 2.2L Co2 Bottle (Default)	105mm W x 320mm H
Underbench Dimensions - 7.5L Co2 Bottle (Upgrade)	105mm W x 680mm H